



HITEC CR

OUTPUT

Temperature Output
Alarm Output
Time-up Output

Operation Manual

Fifth Edition

Yamato Scientific America Inc.

3. Caution in use




	1. Be sure to turn off the breaker on connection.
	2. Use either the time-up and the alarm output under the contact capacity.
	3. Be careful not to short-circuit the temperature output terminal.
	4. Be sure to connect the temperature output terminal to the recorder etc., with input impedance of 100k or more.
	5. Fasten securely the screw attached to terminal for connection.

Table 1 Output of Each Machine Type

Type (series)	Output (mV/)
DFS	5
DHS	
DES	
DTS	
DP	
DN	
DS	
SG	
IN	
IL700	
FP	2
SM	10